


Ecophon Akusto™ One SQ

THAT **Sounds Better**


Fixing
Option 1

Fixing
Option 2

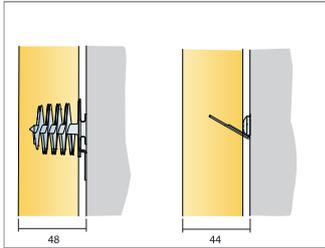


Option 1

Option 2

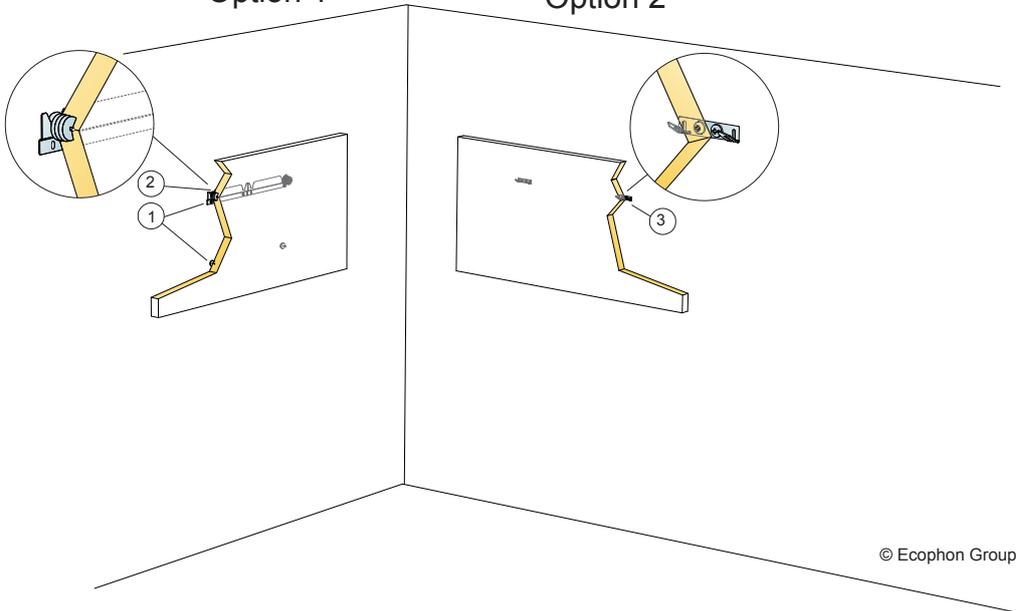

Option 1

1. Connect One trim with
2. Connect Absorber anchor one




Option 2


3. Connect One hook fixing



Either fixing option purchased can be used with any size Akusto One SQ Squares, Rectangles or Circles.

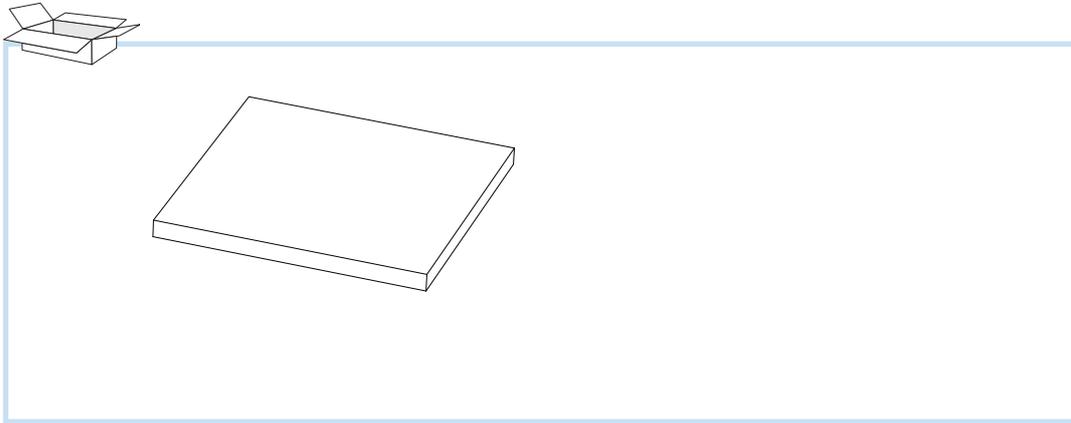


Option 1

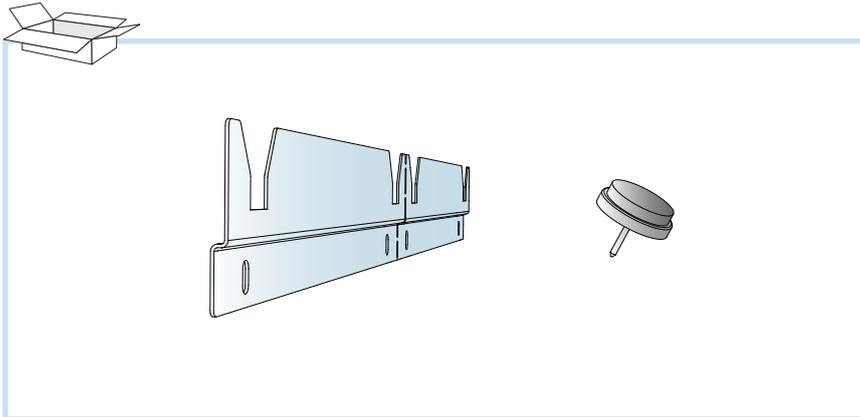

→ Go to page 3

Option 2

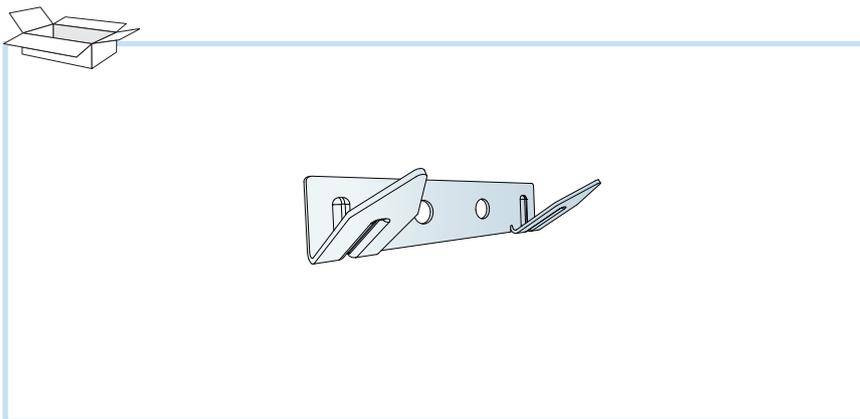

→ Go to page 7




Use gloves provided throughout when holding the tiles

Ecophon[®]
SAINT-GOBAIN
A SOUND EFFECT ON PEOPLE

www.ecophon.com


Option 1

Connect One Trim with Absorber Anchor

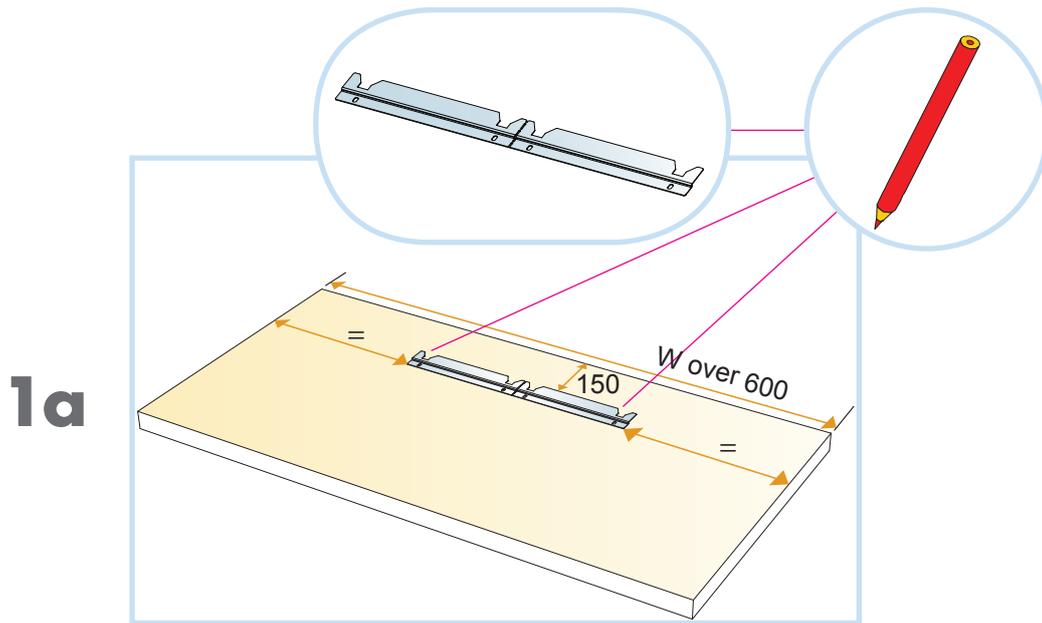


Akusto One Rectangle

Centre the Connect One Trim 150mm down from the top edge of the Akusto One tile. Mark measurements as shown in 1a where the anchors will be placed.

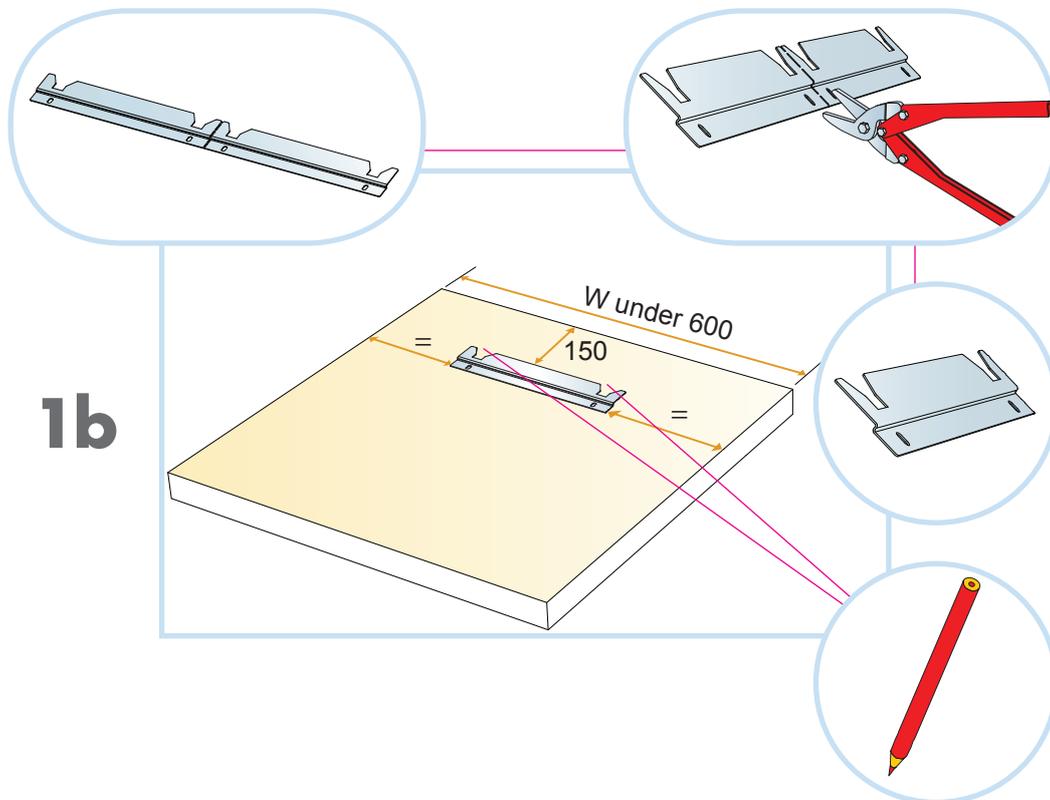


Akusto One Square

Centre the Connect One Trim 150mm down from the top edge of the Akusto One tile. Mark measurements as shown in 1b where the anchors will be placed.

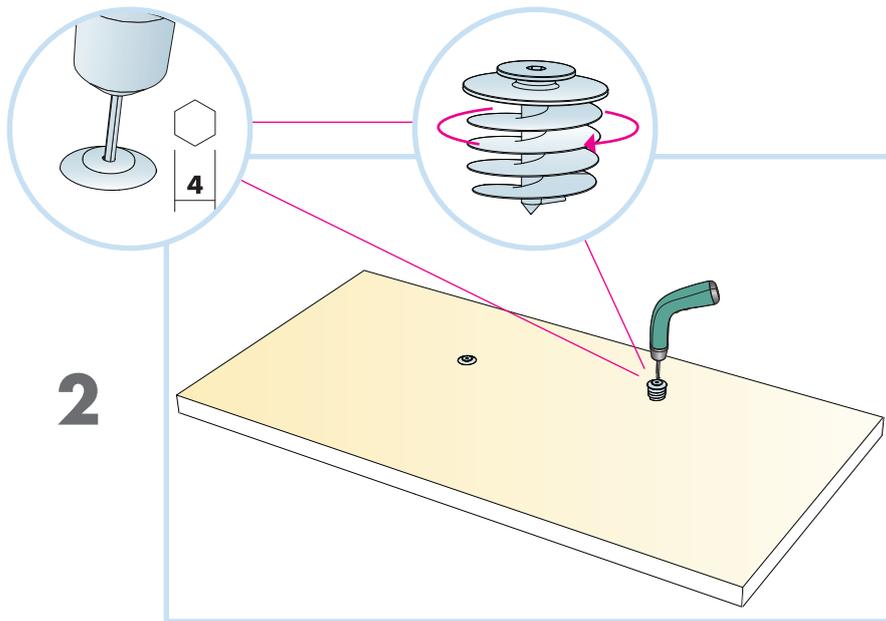


Using a screwdriver, screw the absorber anchor into your marked area from previous diagram 1b.

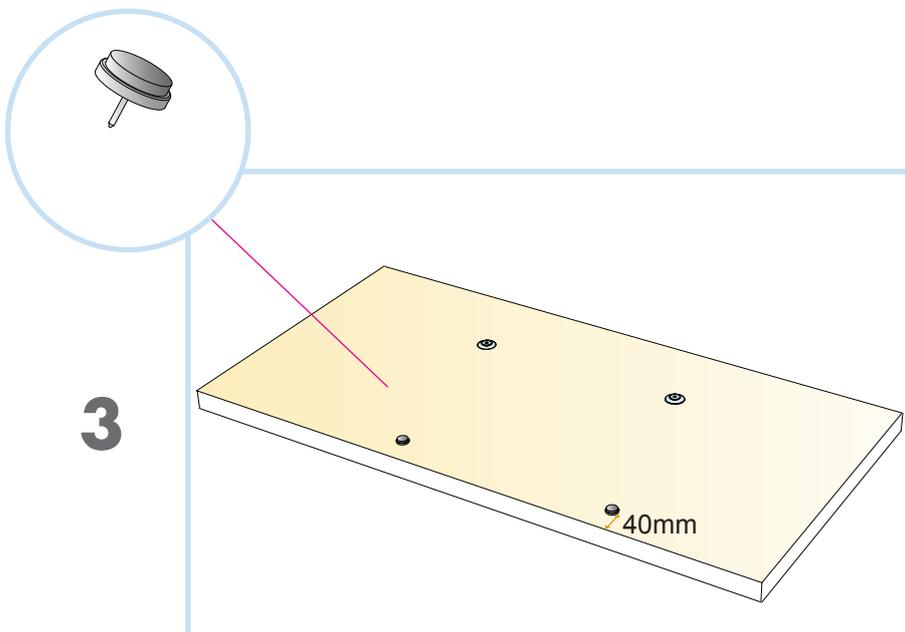

Wall spacers are used to maintain a consistent gap between the wall and the panel.

2 x spacer needed if width over 600
1 x spacer needed if width under 600


4a

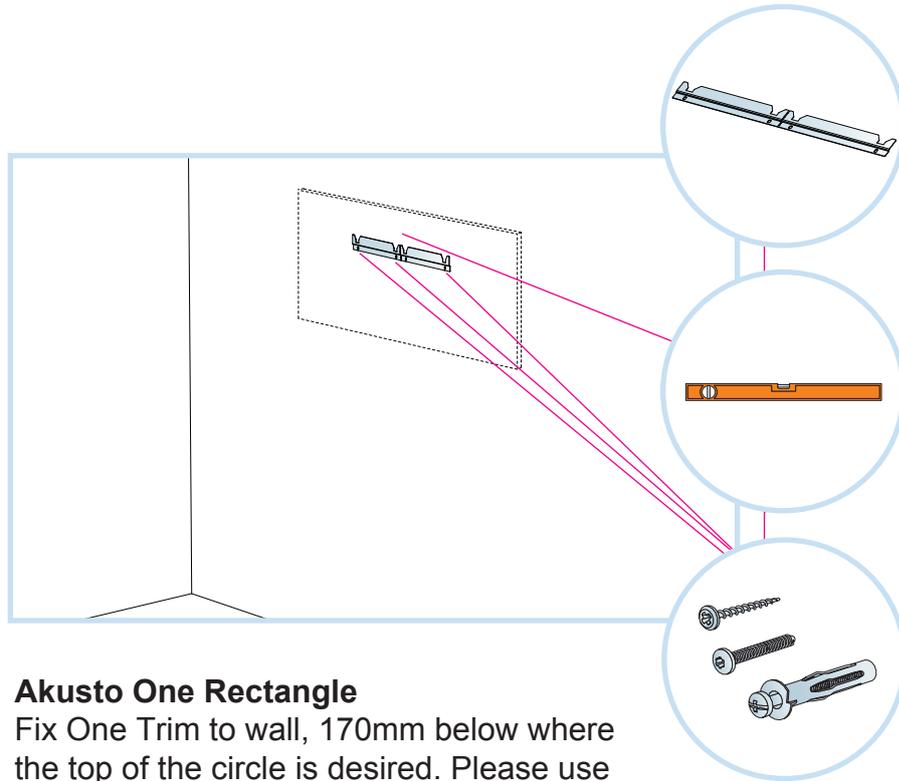

Akusto One Rectangle


Fix One Trim to wall, 170mm below where the top of the circle is desired. Please use appropriate screw/wall fixings - not included.

4b

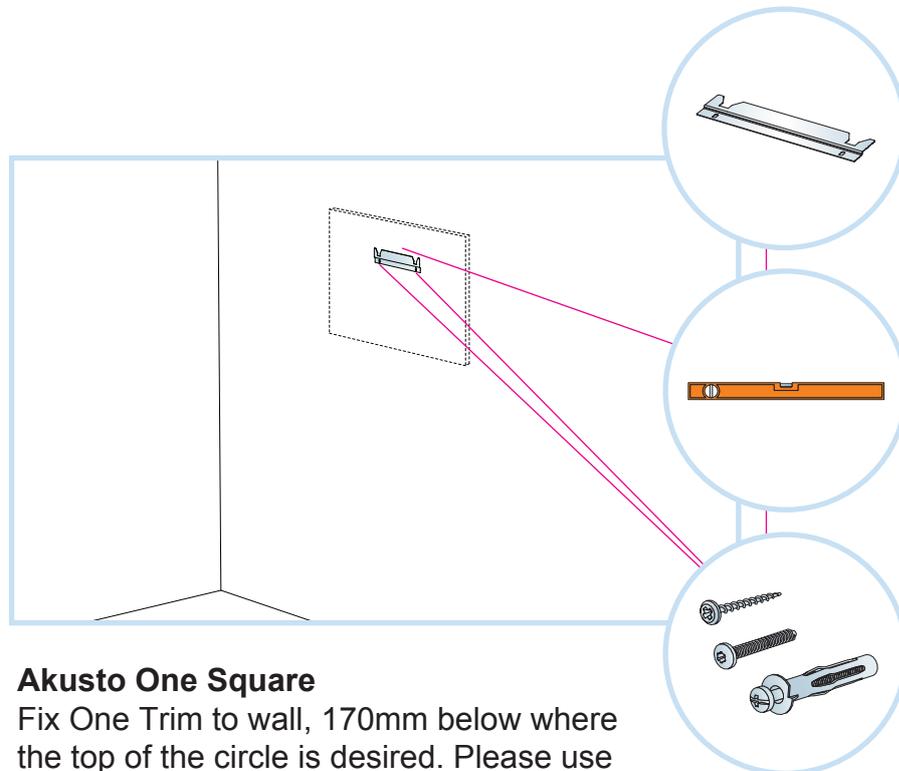

Akusto One Square


Fix One Trim to wall, 170mm below where the top of the circle is desired. Please use appropriate screw/wall fixings - not included.

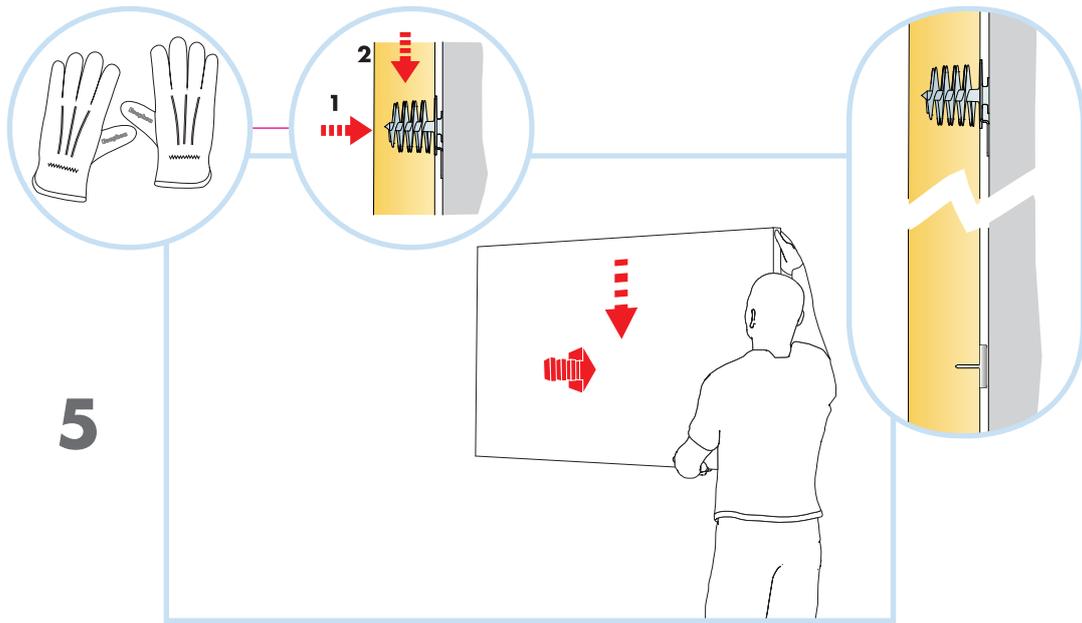


Align tile on bracket

Option 2

Connect One Hook Fixing

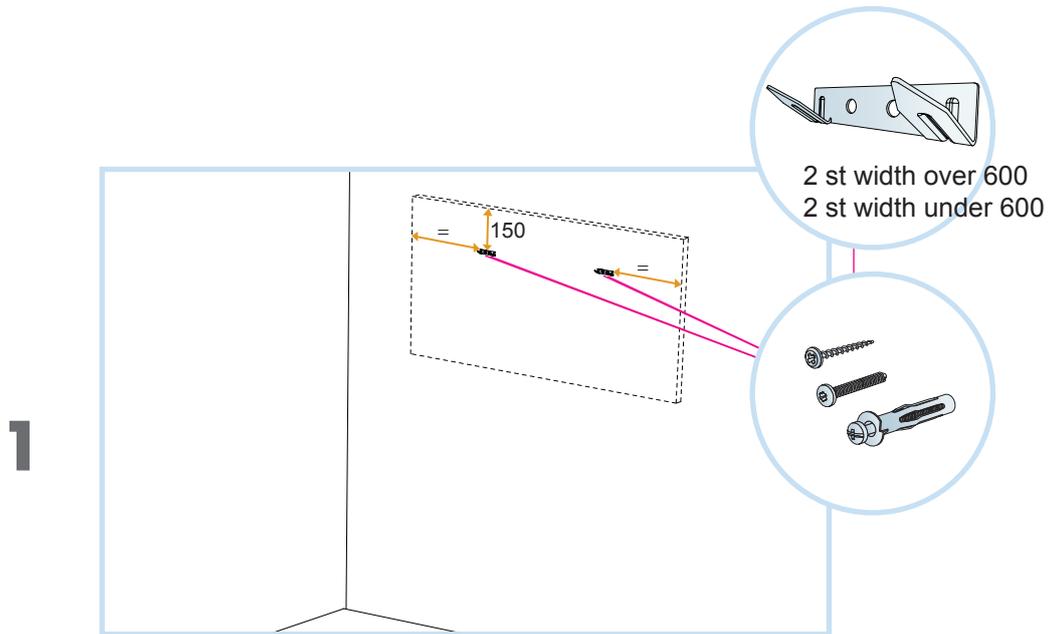

Please use appropriate screw fixings - not included.
Two Connect One Hook fixings to be used for 600x600 square, 1200x600, 1200x300 rectangle. Attach the fixings to the wall as per the above image.

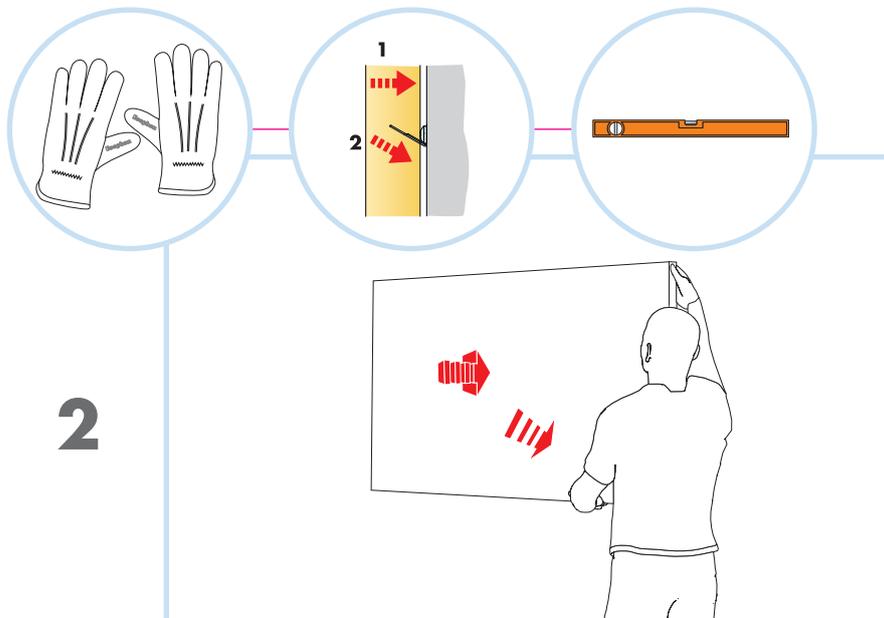

Carefully push the tile onto the One Hook fixings which are now fixed to the wall. Use gloves provided to handle the tile.