
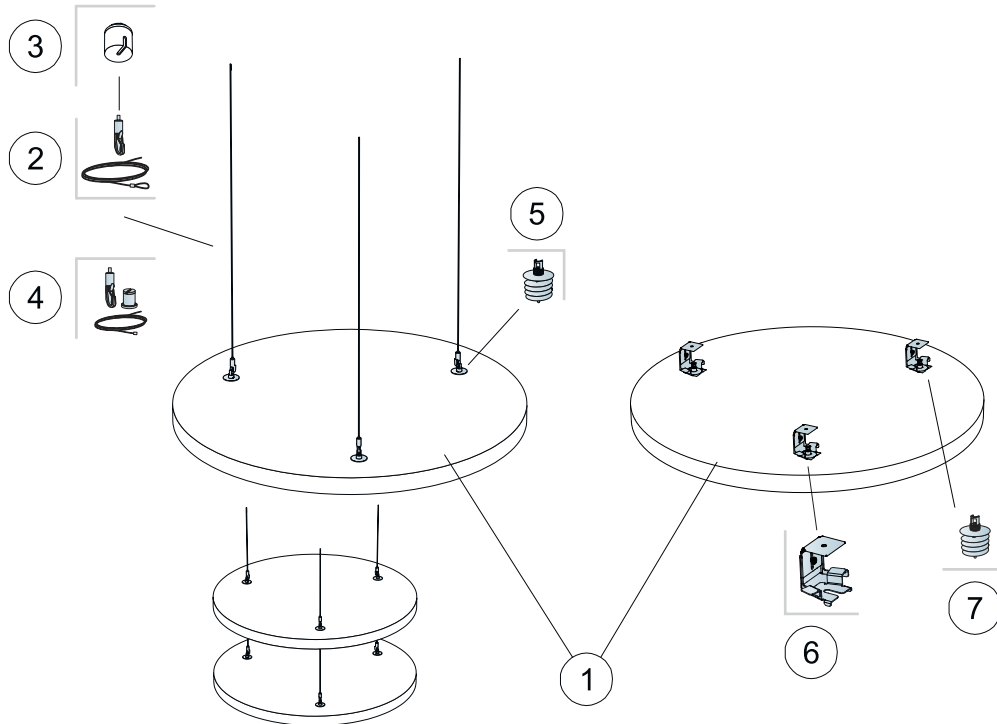


**Ecophon Solo**<sup>™</sup>  
**Circle**  
Ø800  
M411

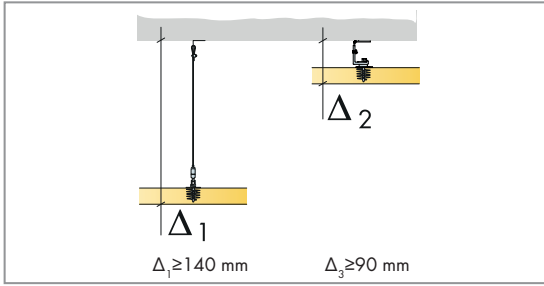

1. Ecophon Solo Circle Ø800

2. Connect Adjustable wire hanger  
L=2000/5000 mm


3. Connect Covering cup



4. Connect Adjustable wire kit  
L=800/1500 mm

5. Connect Absorber anchor


6. Connect Absorber bracket  
 $\Delta=90-110, 110-130$

7. Connect Absorber anchor

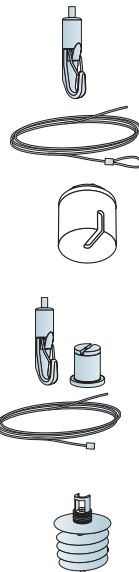

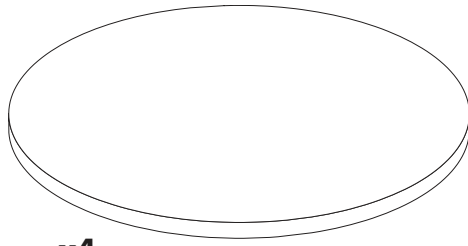


**x4**

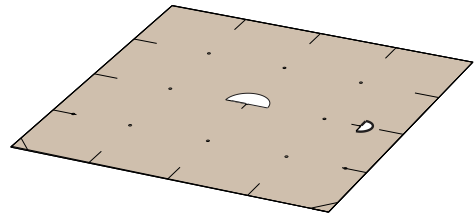


**x1**




Connect Anchor screw with eye




Connect Anchor screw



Connect Installation screw MWL



Connect Fixing plate




Connect Absorber anchor bit

**Ecophon**<sup>®</sup>  
SAINT-GOBAIN


A SOUND EFFECT ON PEOPLE

[www.ecophon.com](http://www.ecophon.com)

Alt 1

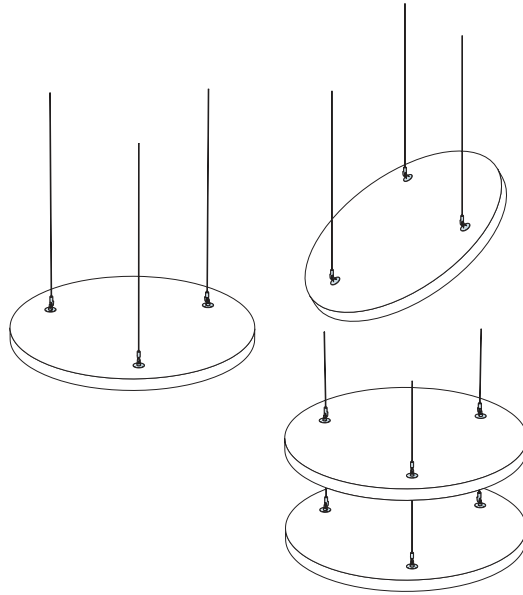


→ 1

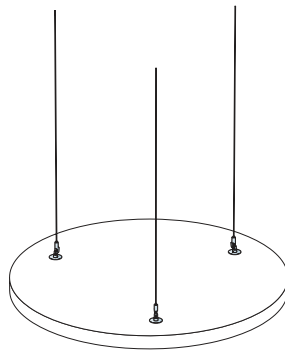


→ 10



Alt 2

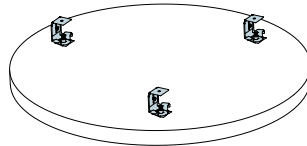



→ 11

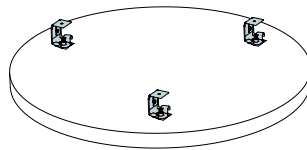



→ 16

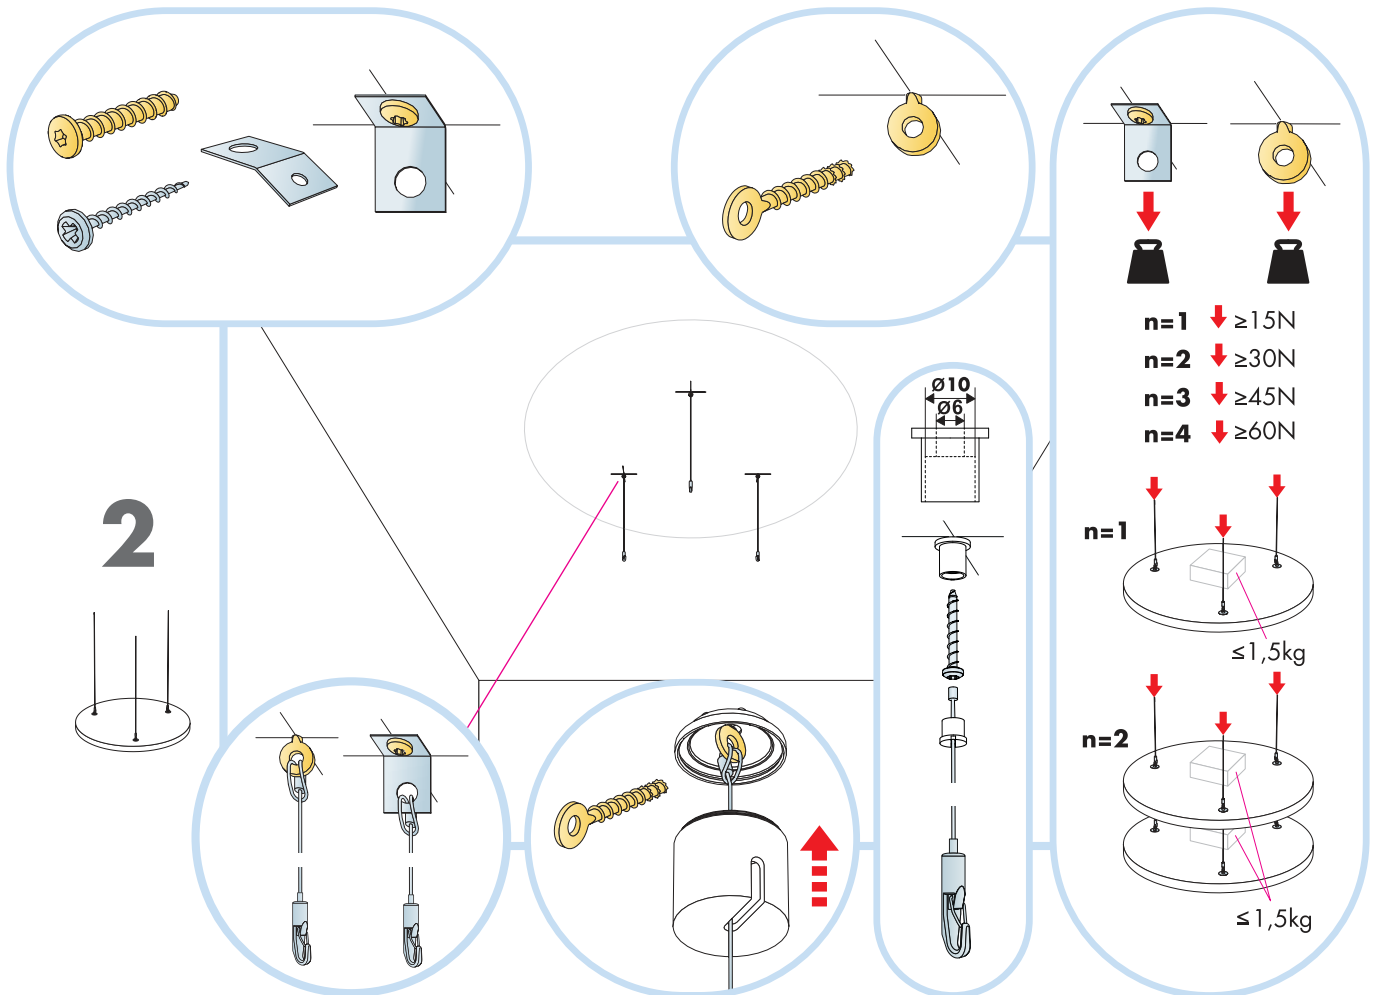
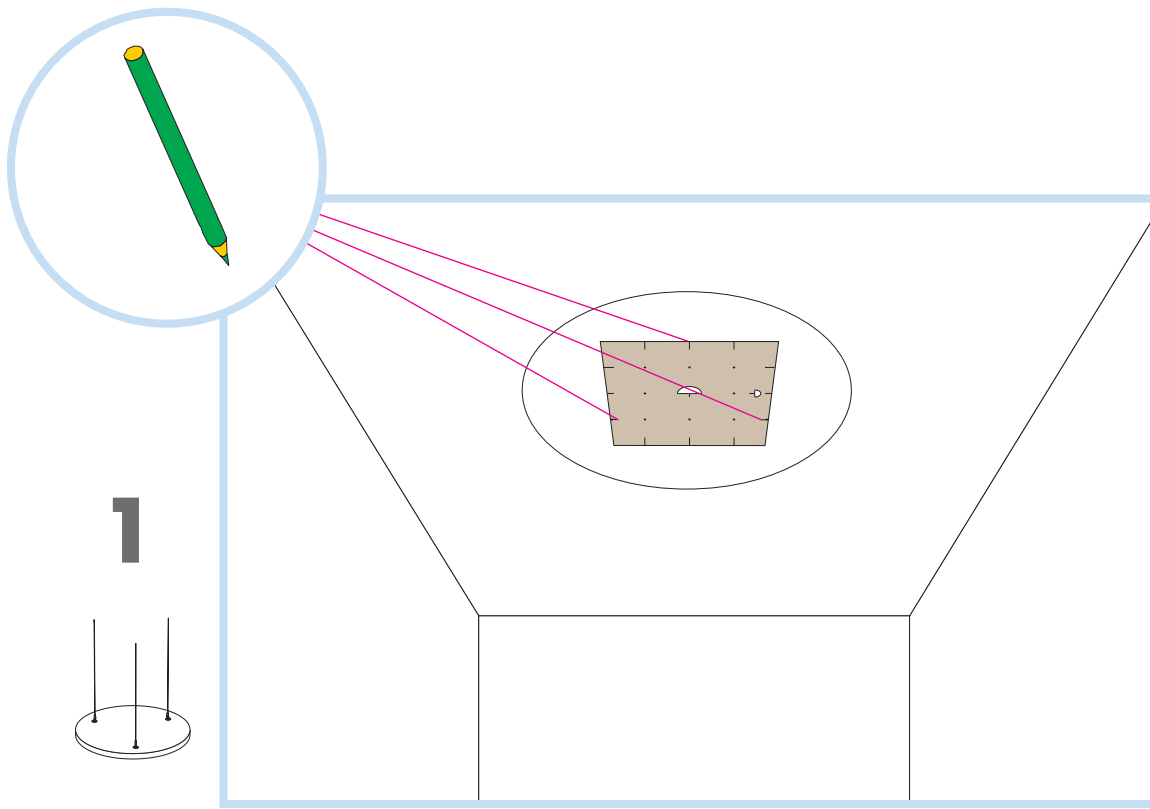


**3**


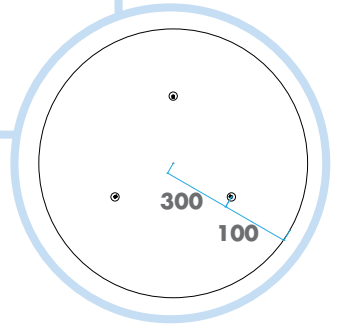
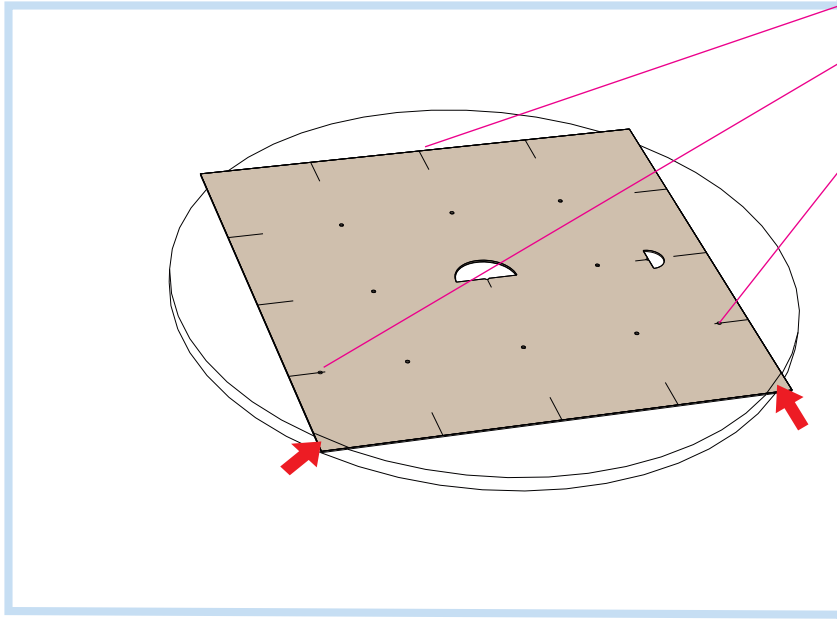


**4**

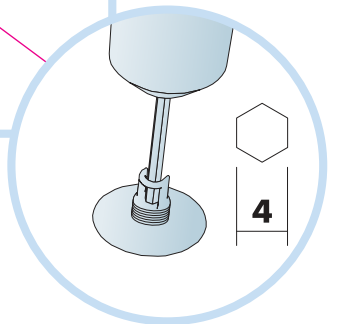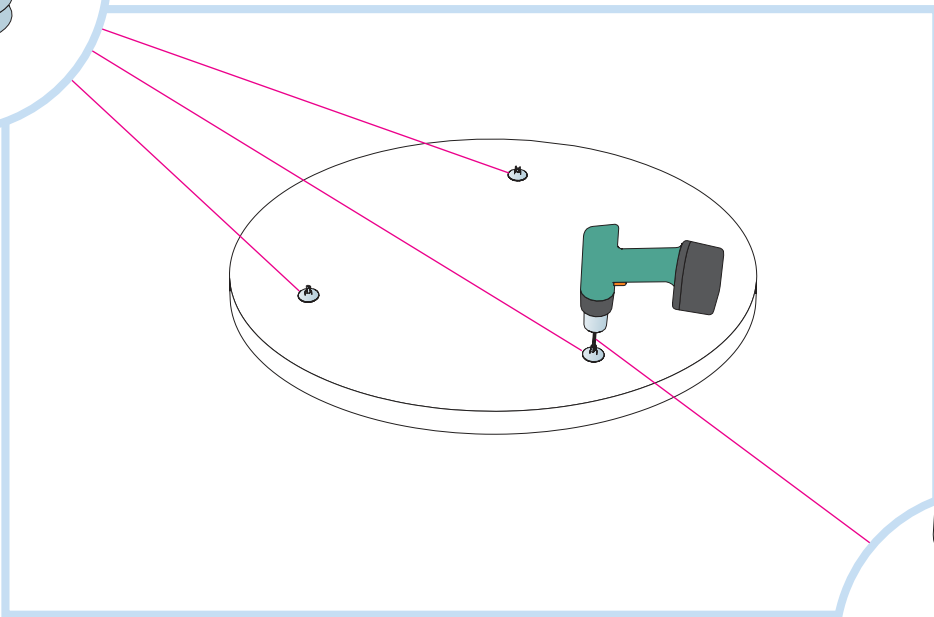


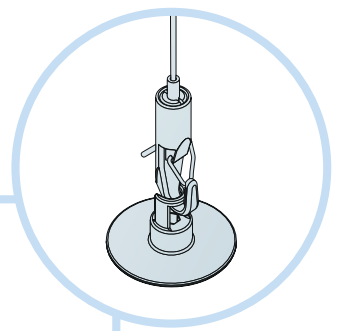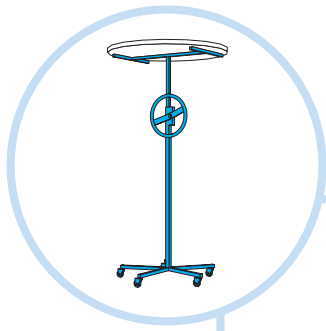


**5**

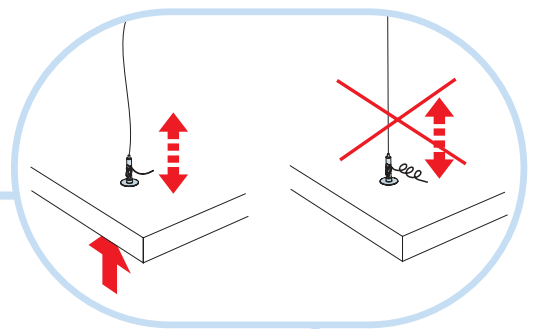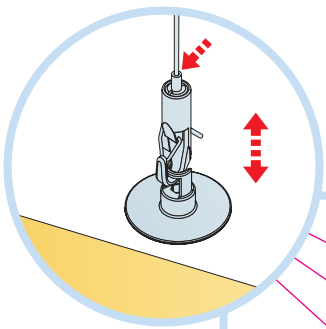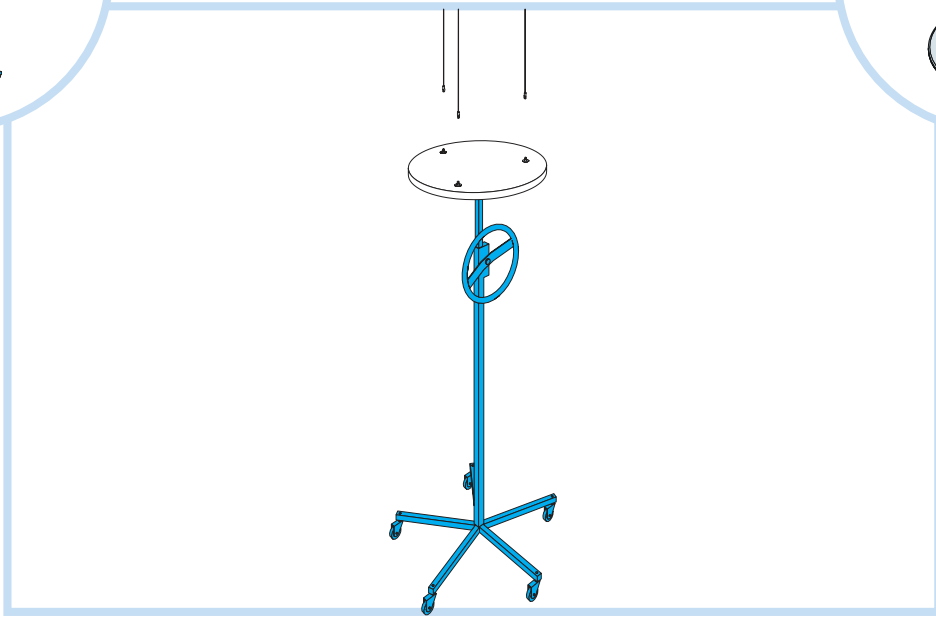



**6**

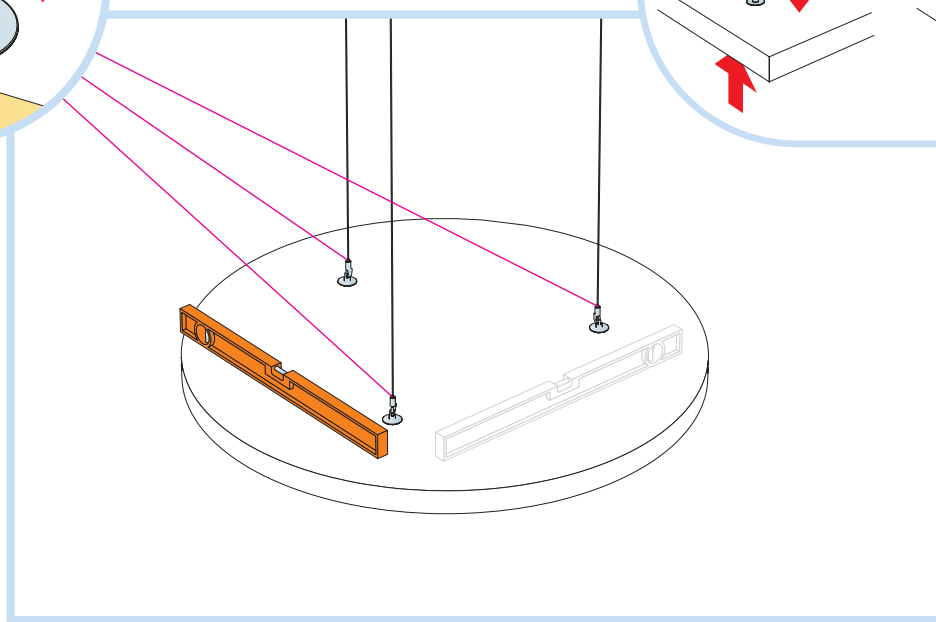


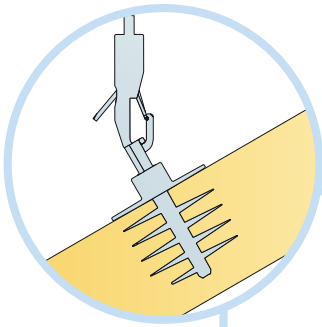


$\alpha$	L
15°	435
30°	390
45°	320
60°	225


**7**

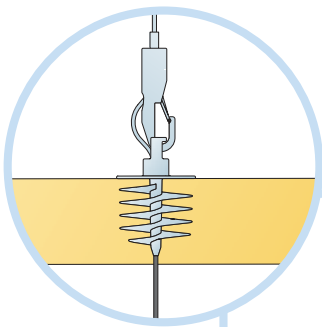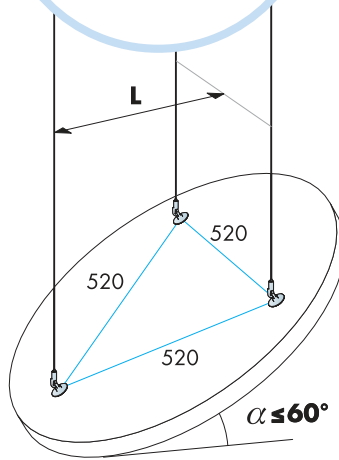


**8**

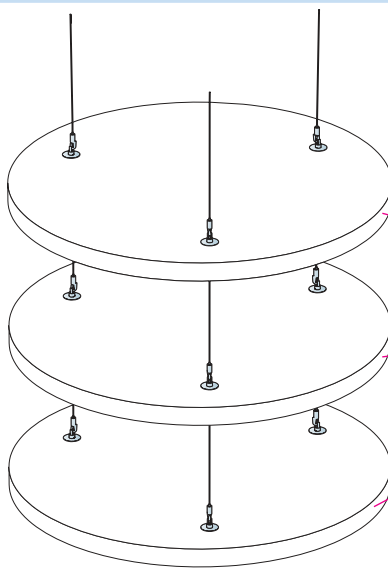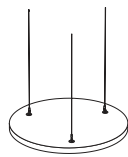

**≤4**



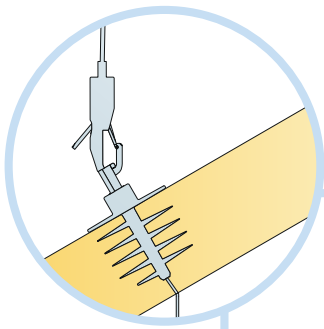


9




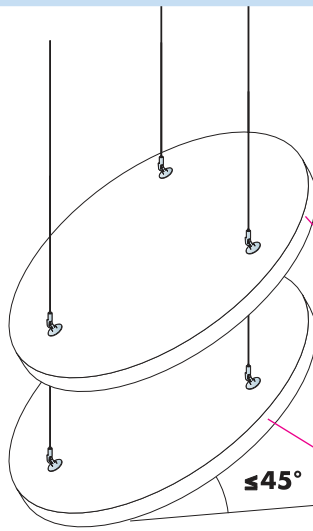


$\alpha$	L
15°	435
30°	390
45°	320



$\leq 3$

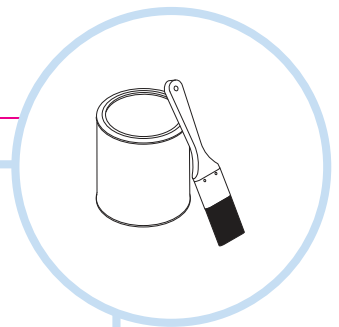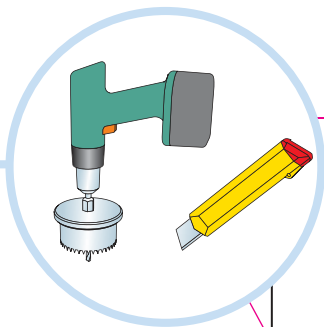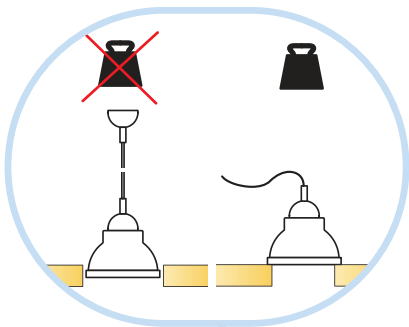




10

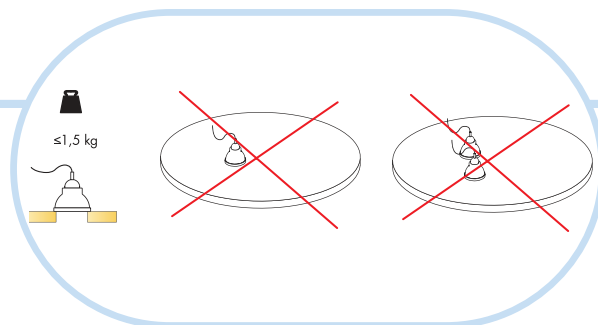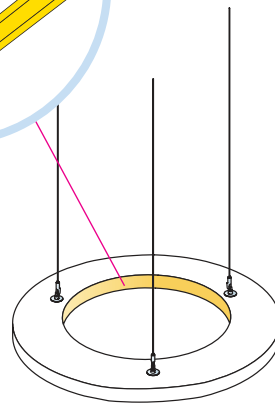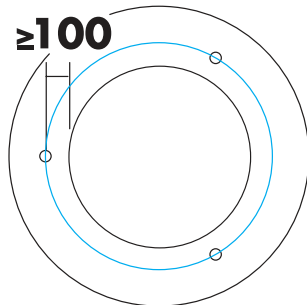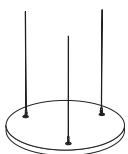










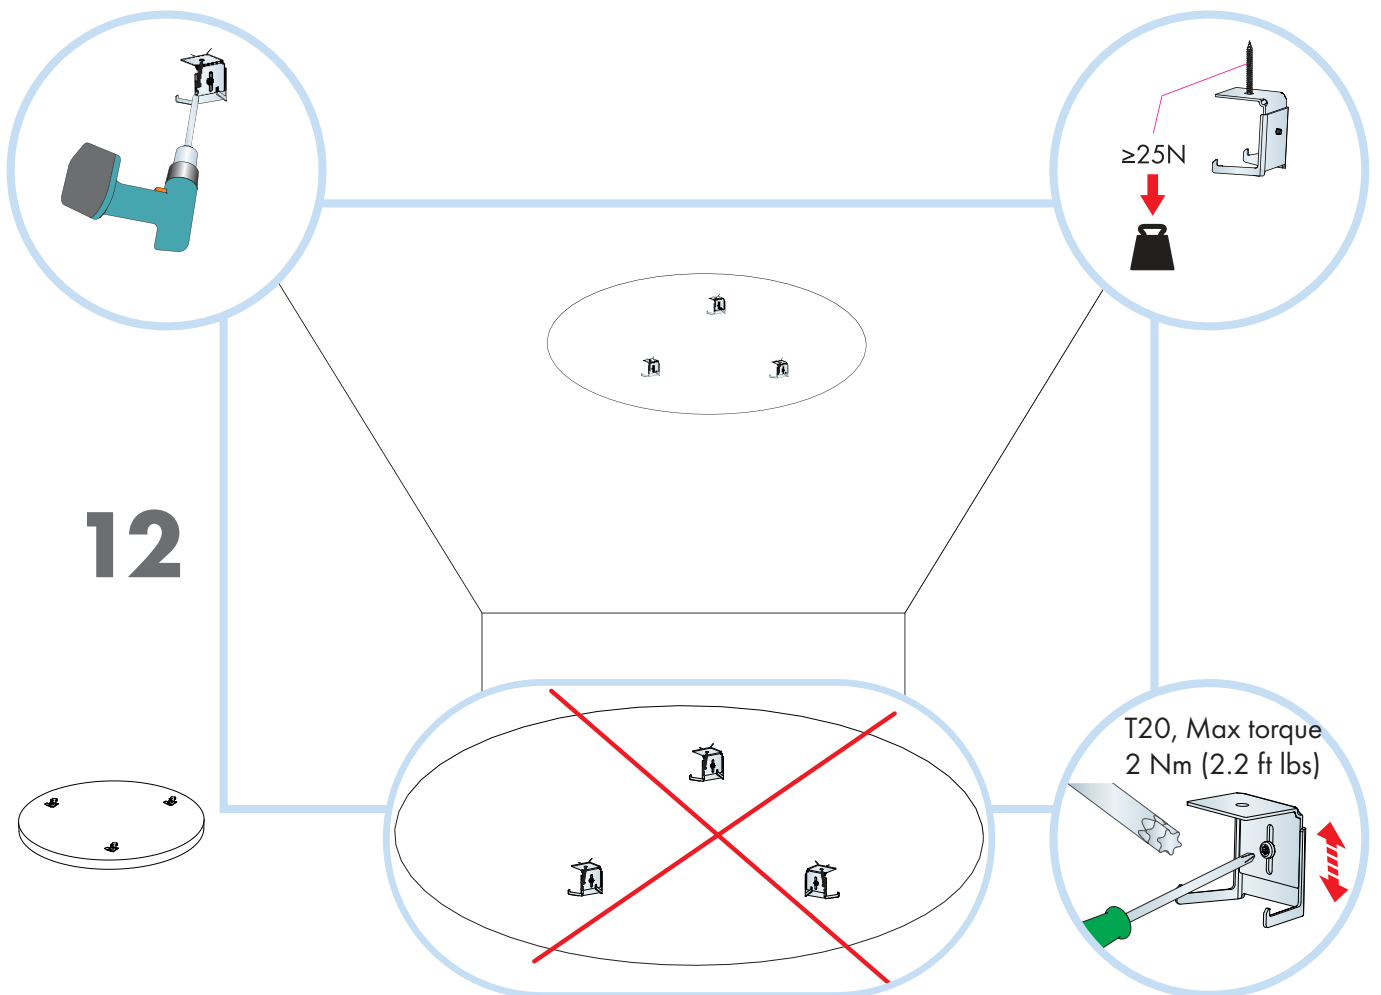
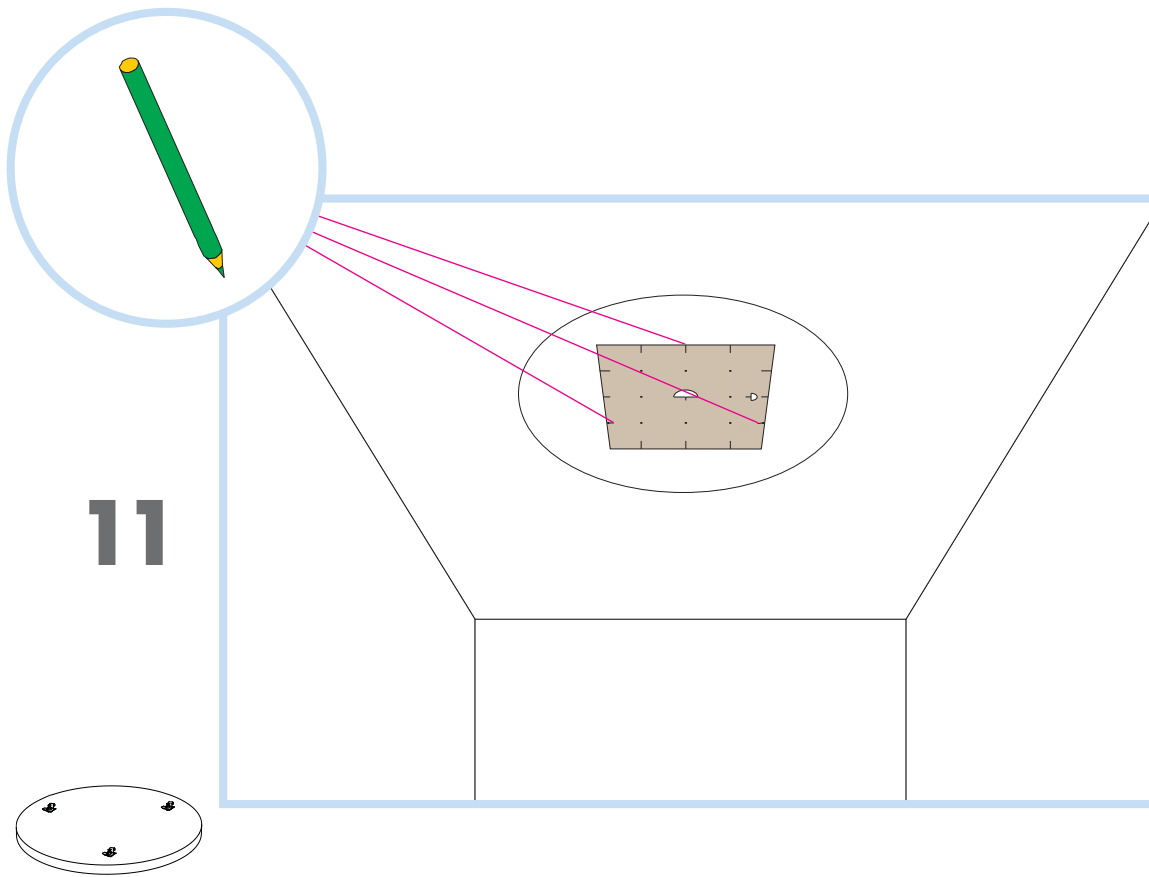


13

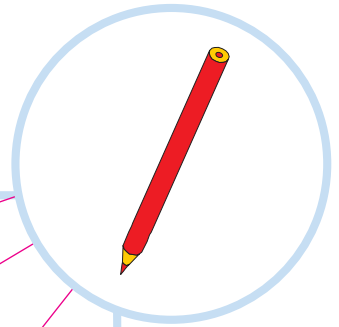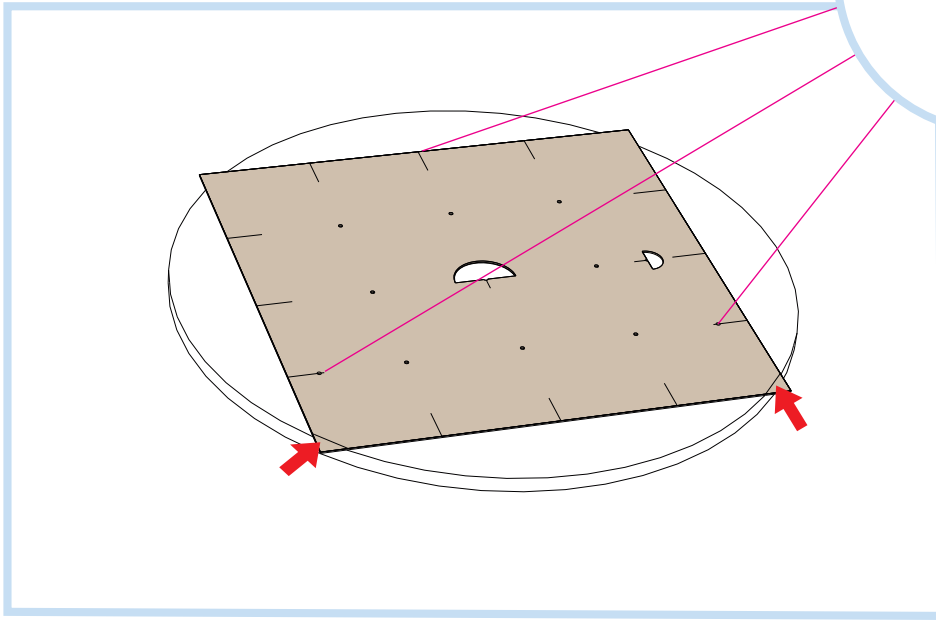






14

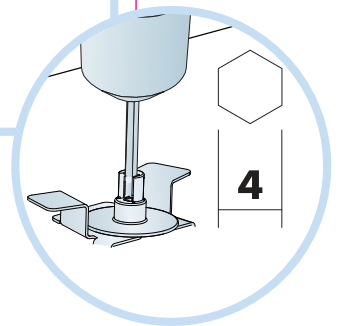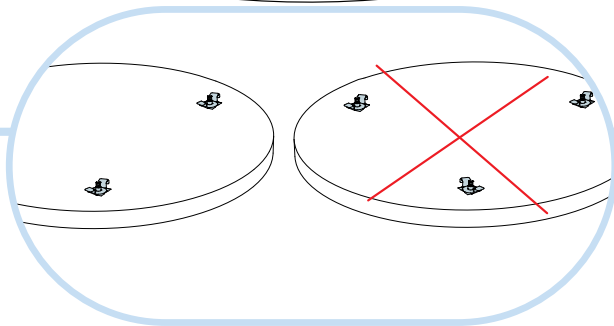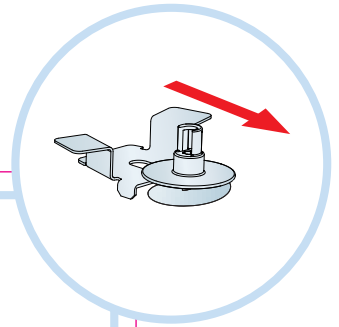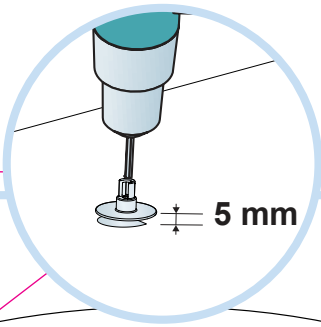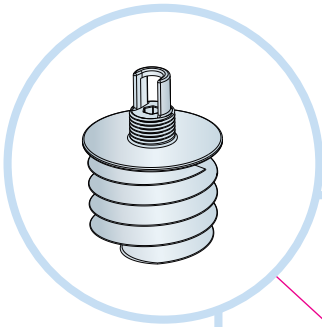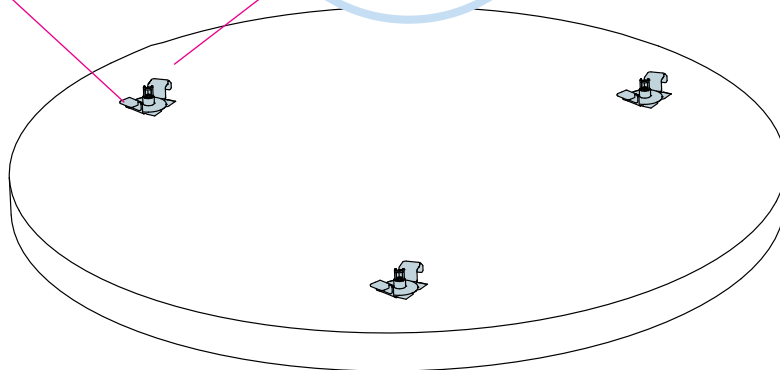

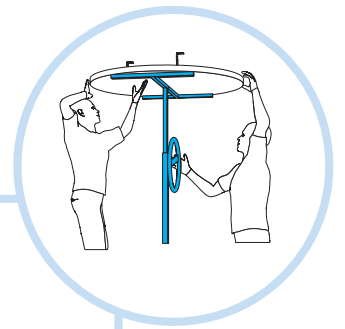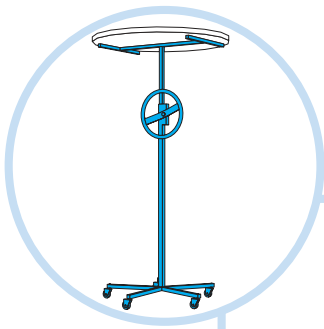

15

- 1
- 2
- 3

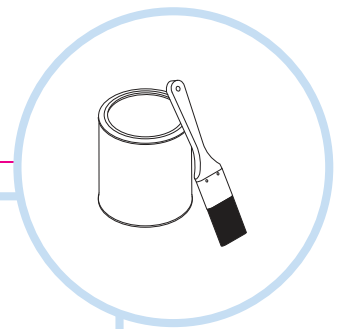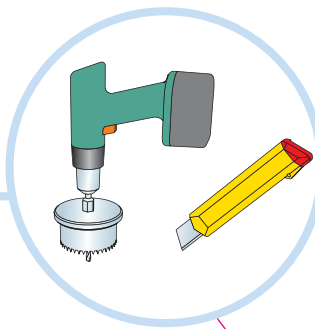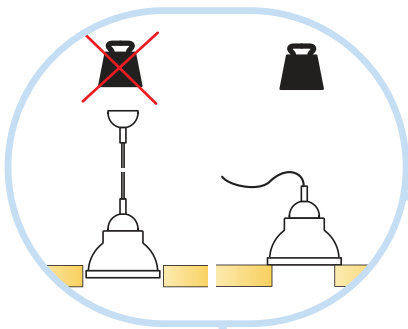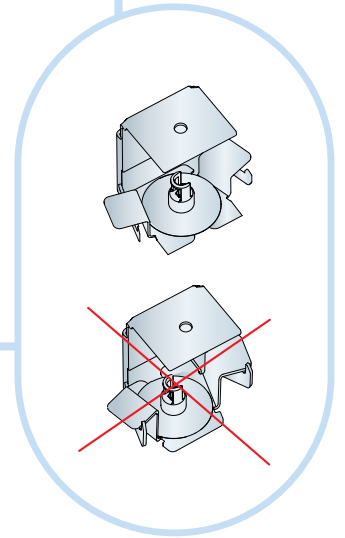

16

